



ASR-010D-V3 and ASR-010D-V4

Barcode Parameters for HID Mode

Copyright © Asterisk Inc. All Rights Reserved.

AsReader ® is registered trademarks of Asterisk Inc.

The contents of this manual are subject to change without notice.

Preface

This manual describes the parameters required for some settings when using AsReader ASR-010D-V3 and ASR-010D-V4 (hereinafter referred to as ASR-010D) in HID mode. For other settings, please refer to the dedicated barcode setting manual.

How to change the settings

Select the appropriate setting code from this manual and scan it. The new settings will be saved in the ASR-010D.

Note: Make sure the ASR-010D's battery is fully charged before setting.

If you have any comments or questions about this manual, please contact us:

Online, via <https://asreader.com/contact/>

Or by mail, at: Asterisk Inc., Shin-Osaka Dainichi Bldg. 201, 5-6-16

Nishinakajima, Yodogawa-ku, Osaka-city, Osaka, 532-0011 JAPAN

TEL: +81 (0) 50 5536 8733 in Japanese

TEL: +1 (503) 770-2777 x102 in Japanese or English (U.S.A.)

TEL: +31 (0) 10 808 0488 in Japanese or English (E.U.)

Default Settings of ASR-010D

ASR-010D is shipped with the settings stated in the table below.

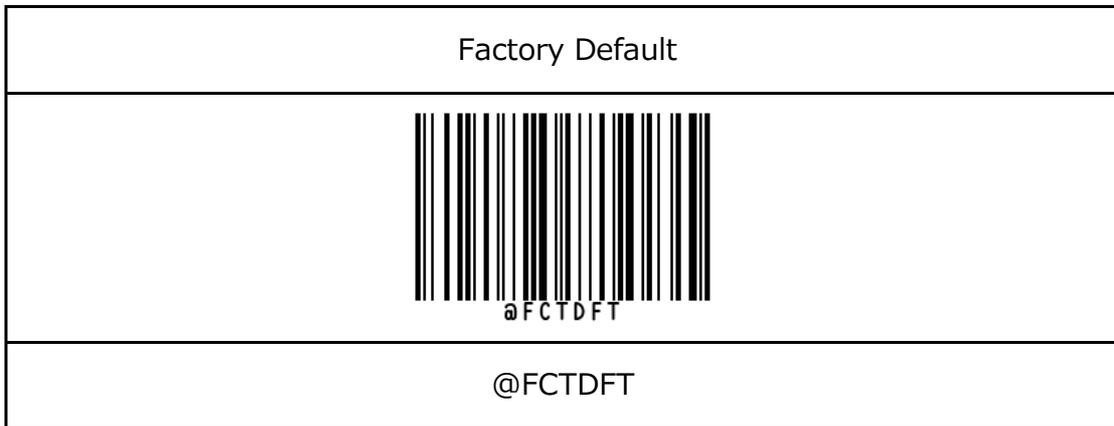
In this manual, the default parameter of each item is marked with an asterisk (*).

Item	Default	Page
Factory Default	-	P.3
Vibration	Vibration On	P.4
Sleep Mode	Sleep Mode On	P.5
Beep After Scan	Beep After Scan On	P.6
Battery Gauge LED	Battery Gauge LED On	P.7
Power On Beep	Power On Beep On	P.8
Inter-Character Delay	10ms delay	P.9~P.10
Country Keyboard Layout Type Code	North American Standard Keyboard	P.10
Appendix	-	P.11

1. Factory Default

Scan the 'Reader FACTORY DEFAULT" barcode above to return barcode parameter values to factory default values.

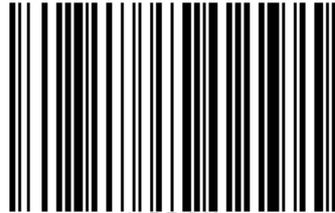
Scanning is not possible while Factory Default is running. Factory Default execution takes 2 seconds.



2. Vibration : "@VIBONX"

Scan the appropriate code below to set whether to vibrate when scanning a barcode.

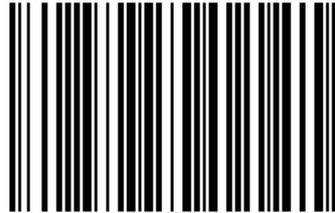
Vibration Off	Vibration On*
 @VIBON0	 @VIBON1
@VIBON0	@VIBON1

Current Value?	
 @VIBON?	
@VIBON?	

3. Sleep Mode: "@SLMONX"

Scan the appropriate code below to set whether to apply sleep mode to ASR-010D.

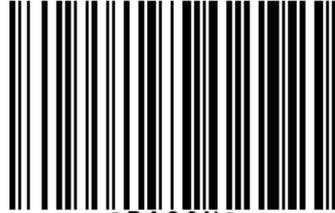
Sleep Mode Off	Sleep Mode On*
 <p data-bbox="470 705 614 739">@SLMON0</p>	 <p data-bbox="1029 705 1173 739">@SLMON1</p>
@SLMON0	@SLMON1

Current Value?	
 <p data-bbox="470 1220 614 1254">@SLMON?</p>	
@SLMON?	

4. Beep After Scan: "@BASONX"

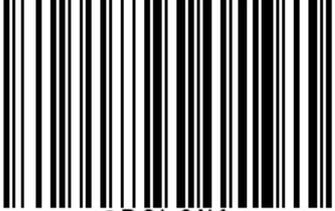
Scan the appropriate code below to set whether to beep when scanning a barcode.

Beep After Scan Off	Beep After Scan On *
 <p data-bbox="470 683 614 705">@BASON0</p>	 <p data-bbox="1029 683 1173 705">@BASON1</p>
@BASON0	@BASON1

Current Value?	
 <p data-bbox="470 1200 614 1223">@BASON?</p>	
@BASON?	

5. Battery Gauge LED: “@BGLONX”

Scan the appropriate code below to enable or disable the battery gauge LED (Battery level indicator) on the back of ASR-010D.

Battery Gauge LED Off	Battery Gauge LED On *
 <p data-bbox="475 683 608 712">@BGLON0</p>	 <p data-bbox="1032 683 1165 712">@BGLON1</p>
<p data-bbox="464 752 619 786">@BGLON0</p>	<p data-bbox="1021 752 1176 786">@BGLON1</p>

Current Value?	
 <p data-bbox="480 1200 612 1229">@BGLON?</p>	
<p data-bbox="469 1270 624 1303">@BGLON?</p>	

6. Power On Beep: “@POBONX”

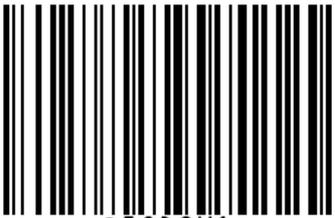
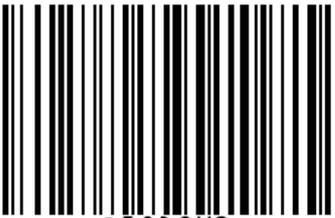
Scan the appropriate code below to set whether to beep when ASR-010D is powered on.

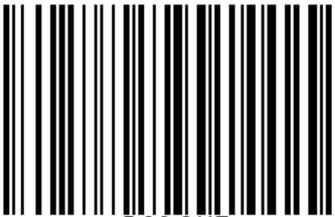
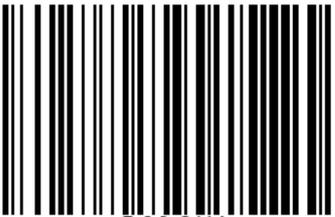
Power On Beep Off	Power On Beep On *
 <p data-bbox="475 683 608 712">@POBON0</p>	 <p data-bbox="1031 683 1163 712">@POBON1</p>
@POBON0	@POBON1

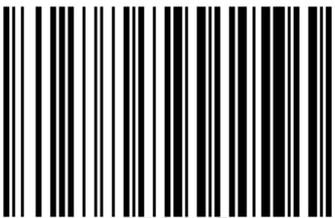
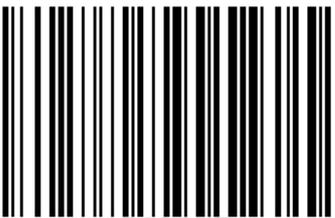
Current Value?	
 <p data-bbox="480 1202 612 1232">@POBON?</p>	
@POBON?	

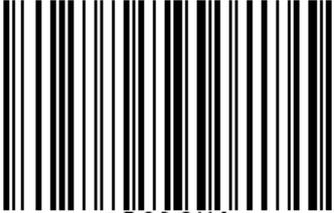
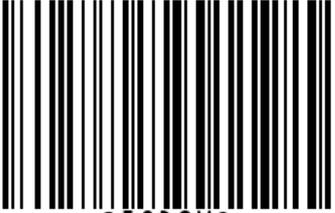
7. Inter-Character Delay: “@ICDSVX”

Scan the appropriate code below to set the display interval time between characters of the barcode data.

5ms delay	10ms delay *
 @ICDSV1	 @ICDSV2
@ICDSV1	@ICDSV2

15ms delay	20ms delay
 @ICDSV3	 @ICDSV4
@ICDSV3	@ICDSV4

25ms delay	35ms delay
 @ICDSV5	 @ICDSV7
@ICDSV5	@ICDSV7

50ms delay	Current Value?
 @ICDSVA	 @ICDSV?
@ICDSVA	@ICDSVA?

8. Country Keyboard Layout Type Code: "@ICDSVX"

Scan the appropriate code below to set country keyboard layout of ASR-010D.

North American Standard Keyboard *	German Keyboard(QWERTZ)
 @CKLTC0	 @CKLTC1
@CKLTC0	@CKLTC1

Current Value?	
 @CKLTC?	
@CKLTC?	

Appendix

1. Barcode module factory default

If the barcode operation is abnormal or if the barcode parameter does not work properly despite scanning the barcode, scan the barcode above.

First scan 'Barcode Factory Default' and then 'Barcode Decode Data Packet Format'.

Among the barcode parameters, 'Current value?' Scan the barcode to see if it works properly.

Barcode Factory Default	Barcode Decode Data Packet
 Set Factory Defaults	 Send Packeted Decode Data (01h)

AsReader

ASR-010D-V3 and ASR-010D-V4 Barcode Parameters for HID Mode

May. 2022 1nd version

Asterisk Inc.

Shin-Osaka Dainichi Bldg. 201, 5-6-16 Nishinakajima, Yodogawa-ku,
Osaka-city, Osaka, 532-0011 JAPAN